

Cottage Series Cupolas Installation Instructions



For weathervane assembly instructions see other side.


Remove wood pieces.



Stainless Steel Screws

HARDWARE AND MATERIAL

- Stainless Steel Screws Wood Screws
- 2x4s
- Caulking for Cupola
- Optional Base

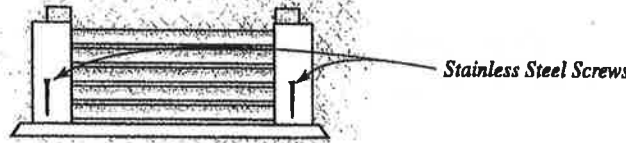


Stainless Steel Screws

- Assemble with stainless steel screws


- Amount of material depends on the size of the cupola being installed.

- The manufacturer is not responsible for weather related damage under severe conditions.

- The manufacturer is not responsible for improper installation.

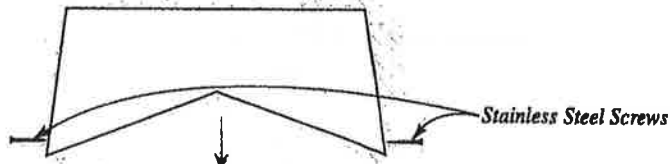

Stainless Steel Screws

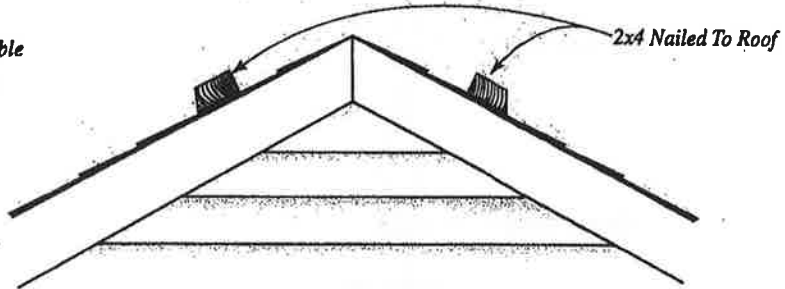


2x4 Nailed To Roof

Fitting The Cupola to Your Roof


①

Place two pieces of wood at the roof peak and mark them where they cross.

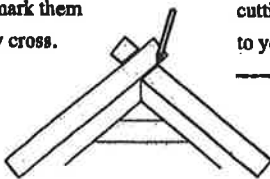


②

Use the marked pieces as a template for cutting the cupola base to your roof's pitch.

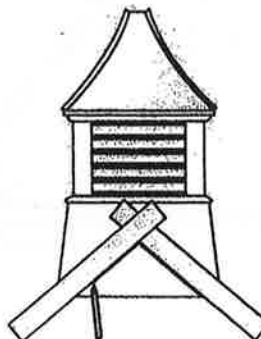

③

Fit the cupola to your roof, seal and secure it.

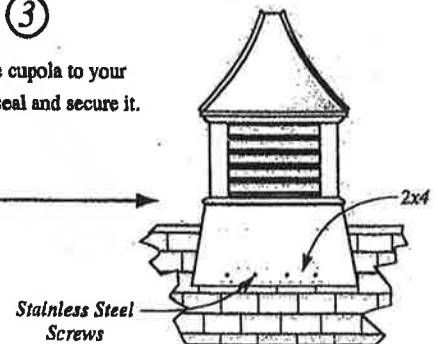

Stainless Steel Screws

2x4